Operation Manual

DEEP BED FILTRATION

Models: MU-DB900(C)-1.0 / MUDB1000(C)-1.0 /MU-DB900(C)-1.2/ MU-DB1000(C)-1.2

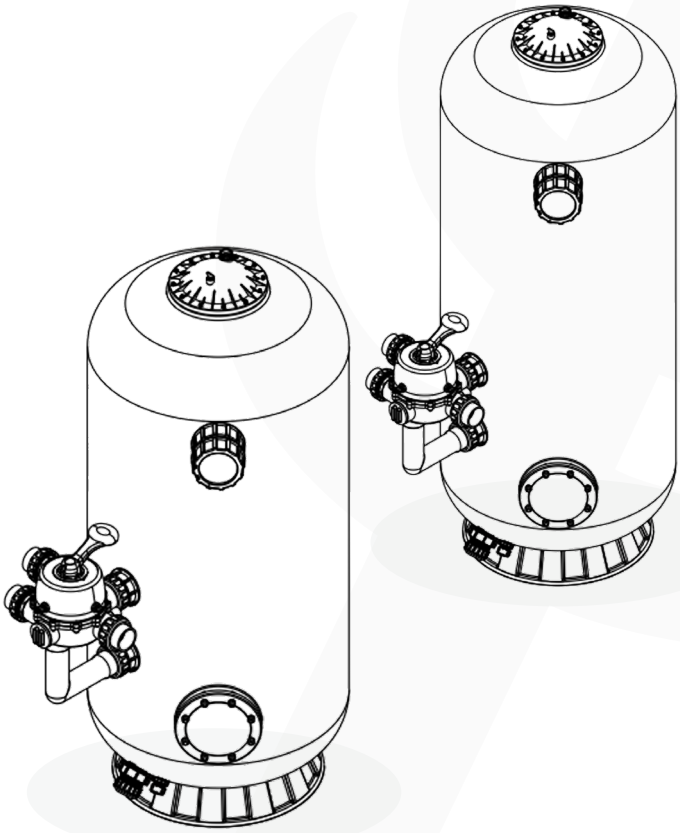

(ITALY) AQUA S.p.A. | 42018 San Martino in Rio, Reggio Emilia Via Crotti, 1 | aqua@aqua.it, www.aqua.it
T +39 (0)522 695805 F +39 (0)522 646160 |

INDEX

Models: MU1000/ MU1200

This manual contains important information for the safe installation, operation and maintenance of your filter.

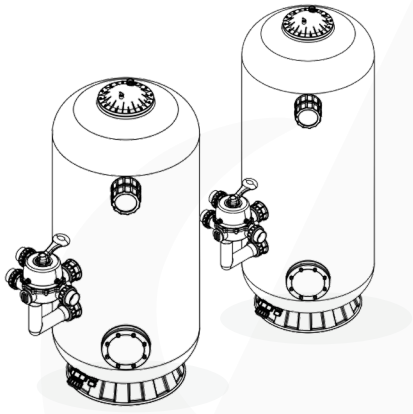

01	FUNCTION	01
02	INSTALLATION	01
03	MAIN DIMENSION	02
04	INSTALL/START-UP OF FILTER	02
05	FUNCTIONS OF VALVE POSITIONS	03
06	WARNING	04

01 FUNCTION

The filter uses special filter sand to remove dirt particles from pool water. The filter sand is loaded into the filter tank and functions as a permanent dirt removing media. When the control valve is in the FILTER position, the pool water which contains suspended dirt particles, is pumped through your piping system and is automatically directed by the patented filter control valve to the top of the filter tank. As the pool water is pumped through the filter, dirt particles are trapped by the sand bed, and filtered out. The cleaned Pool water is returned from the bottom of the filter tank, through the control valve and back to the pool through the piping system. This entire sequence is continuous and automatic.
It provides for total recirculation of pool water through your filter and piping System.

After a period of time, the accumulated dirt in the filter causes a resistance to flow, and the flow diminishes. This means it is the time to clean your filter. With the control valve in the BACKWASH position, the water flow is automatically reversed through the filter so that it is directed to the bottom of the tank, up through the sand, flushing the previously trapped dirt and debris out the waste line. Once the filter is back-washed of dirt, set control valve to RINSE position and run pump for about 1/2 to 1 minute, and then set the control valve in the FILTER position, to resume normal filtering.

02 INSTALLATION

Only simple tools (screwdriver and wrenches), plus pipe sealant for plastic adapters, are required to install and service the filter.

1) The filter should be placed on a level concrete slab, very firm ground, or equivalent. Position the filter so that the piping connections, control valve are convenient and accessible for operation and service.

2) Loading the sand media. Filter sand media is loaded through the top opening of the filter.

a) Loosen flange clamp and remove filter control valve (if previously installed).

b) Cap internal pipe with plastic cap to prevent sand from entering it.

c) We recommend filling tank approximately 1/2 way with water to provide a cushion effect when the filter sand is poured in. This helps protect the under-drain laterals from excessive shock.

d) Carefully pour in correct amount and grade of filter sand. (Be sure center pipe remains centered in opening.)Sand Surface Should be leveled and should come to about the middle of the filter tank. Remove plastic cap from internal pipe.

3) Assemble filter control valve to filter tank.

a) Insert filter control valve (with O'ring in place) into the tank neck, ensuring the twelve bolts which is pre-embedded in the tank neck through the twelve hole a.

b) Put the twelve nuts and washers on each of the twelve bolts, then tighten all the nuts with wrench, ensuring that all nuts are tight.

c) Carefully screw pressure gauge (with O'ring in place) into the tapped hole in valve body. Do not over-tighten.

d) Connect pump to control valve opening marked PUMP.

4) Make return to pool pipe connection to control valve opening marked RETURN and complete other necessary plumbing connections, suction lines to pump, waste, etc.

5) Make electrical connections to pump per pump instructions.

6) To prevent water leakage, be sure all pipe connections are tight.

03 MAIN DIMENSION

DIMENSION TABLE

Model	Height (mm) A	Diameter (mm) B	Valve (Inch)	Sand (kg)
MU-DB900(C)-1.0	1735	900	2.5″	957
MU-DB1000(C)-1.0	1813	1000	2.5″	1204
MU-DB900(C)-1.2	1938	900	2.5″	1146
MU-DB1000(C)-1.2	2013	1000	2.5″	1436

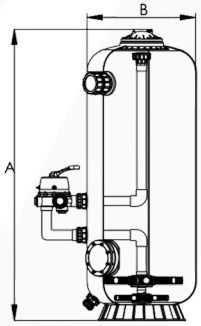

04 INSTALL/START-UP OF FILTER

1) Be sure correct amount of filter media sand is in tank and that all connections have been made and are secure.

2) Depress control valve handle and rotate to BACKWASH position. (To prevent damage to control valve seal, always depress handle before turning.)

3) Prime and start pump according to pump instructions (be sure all suction and return lines are open), allowing the filter tank to fill with water. Once water is flowing out of the waste line, run the pump for at least 1 minute. The initial back-washing of the filter is recommended to remove any impurities or fine sand particles in the sand media.

4) Turn pump off and set valve to RINSE position. Start pump and operate until water in sight glass is clear, about 1/2 to 1minute.Turn pump off and set valve to FILTER position and restart pump.The filter is now operating in the normal filter mode, filtering dirt particles from the pool water.

5) Adjust pool suction and return valves to achieve desired flow. Check system and filter for water leaks and tighten connections, bolts, nuts, as required.

6) Note the initial pressure gauge reading when the filter is clean. (It will vary from pool to pool depending upon the pump and general piping system.) As the filter removes dirt and impurities from the pool water, the accumulation in the filter will cause the pressure to rise and flow to diminish. When the pressure gauge reading is 1.5 bar, higher than the initial “clean” pressure you noted, it is time to backwash the filter (see BACKWASH under filter and control valve functions)

NOTE:
During initial clean-up of the pool water it may be necessary to backwash frequently due to the unusually heavy initial dirt load in the water.

05 FUNCTIONS OF VALVE POSITIONS

Valve	Function
Position	Normal Filtration and Vacuuming
FILTER	Cleaning Filter by reversing the flow
BACKWASH	Used after backwash to flush dirt from valve
RINSE WASTE	By-passes filter, used for vacuuming to waste or lowering water level
RECIRCULATE	By-passes filter for circulating water to pool
CLOSED	Shuts off all flow to filter or pool

FILTER

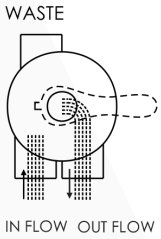

WASTE

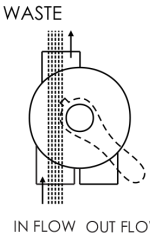

CLOSED

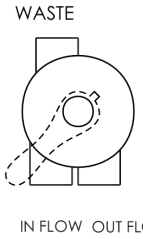

BACKWASH

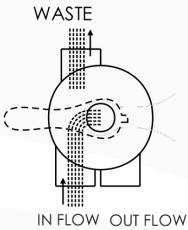

RINSE

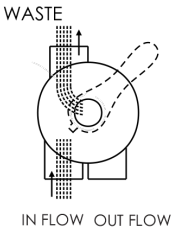

RECIRCULATE

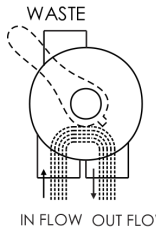

GENERAL

1) Pipe tap boss provided for optional influent pressure gauge.

2) SERVICING VALVE(Stop pump,close gate valve in suction&discharge before proceeding):

a) Set handle in filter position. b) Remove cover screws. c) Lift cover and key assembly out.

TO ASSEMBLE:

1) Place valve key so that wedge opening is at TOP port (handle in Filter psn.).

Flat edge of cover screw lug should align with flat edge of body screw lug.

2) Position cover O'Ring.

3) Secure assembly to body with cover screws. Tighten cover screws evenly and alternately.
Do not over-tighten.

06 WARNING

⚠ This filter operates under high pressure. When any part of the circulating system (e.g., clamp, pump, filter, valves, etc.) is serviced, air can enter the system and become pressurized. Pressurized air can cause the lid or valve to be blown off, which can result in severe injury, death, or property damage.

⚠ Turn the pump off before changing the valve position.

⚠ To prevent damage to the pump and ensure proper operation of the system, clean the pump strainer and skimmer baskets regularly.

⚠ Do not unscrew the flange clamp screws while the pump is running.

⚠ Under low-temperature shutdown conditions, it is strongly recommended to turn the valve to the winterize position and drain all the water from the filter through the bottom drain.

OFFICE

HEAD OFFICE

(I) **AQUA S.p.A**
42018 San Martino in Rio, Reggio Emilia - Italy - Via Crotti. 1
P +39 0522 695805/85 - F +39 0522 646160
aqua@aqua.it | www.aqua.it

Aqua S.p.A - Pool Division
46043 Castiglione d. Stiviere, Mantova - Italy P
+39 0376 671973 - F +39 0376 940139
infopools@aqua.it | www.aqua.it

BRANCHES

(UK) **AQUA WATER SYSTEMS LTD**
Unit 135 Oak Drive Hartlebury Trading Estate,
Worcestershire, DY10 4JB
P +44 (0)1299 251050 - F +44 (0)1299 253704
sales@askaua.co.uk | www.askaqua.co.uk

(E) **AQUA FILTRACION S.A.**
Pol.Ind Castellbisbal Sud 08755
Castellbisbal, Barcellona
P +34 (0)93 7711855 - F +34 (0)93 7711772
info@aqua.es | www.aqua.es

(TR) **AQUA SU ARITIMI SAN. VE MUH. TIC. LTD. STI.**
Ferhatpasa Mahallesi Maresal Fevzi Cakmak
Cad. - No:45 Pk.34888 Atasehir / Istanbul - Turkey
P +90 216 661 60 60 - F +90 216 661 68 50
info@aqua.com tr | www.aqua.com.tr

(UAE) **AQUA MIDDLE EAST FZC**
1J-07/4 and 1J-07/3 - Hamriyah Free Zone
P.O.Box 42585 Sharjah - United Arab Emirates
Tel No. +971 6 526 0563 - Fax No. +971 6 526 0564
contact@aqua-me.ae | www.aqua-me.a

(IND) **"AQUA WATER SYSTEMS INDIA PVT LTD "**
4A/4B/4C-,Puttappa Industrial Estate Mahadevapura
Post, White Fiels Road, Bangalore 560 048
P 0091 80 4152 1313 - F 0091 80 4152 1414
contact@aquaindia.in - sales@aquaindia.in | www.aquaindia.in

(RUS) **"AQUA GROUP RUS"**
Jiuridical Adresss: 107014, Egerskaya str, 1, Moscow, Russia
Residence Adress: 127081, Chermianskaya str, 3, Moscow, Russia
Phone-Fax : +7 495 6458078, +7 495 969 2413
mail@aqua-italy.ru | www.aqua-italy-ru-www.aqua.it

(EGY) **"AQUA GROUP LLC"**
Office : Regus – Sarayat EL Maadi, Egypt
Management & Ware house : Plot no 2-2 nd service axe
2nd Industrial Zone, October, Egypt
Phone : +20 2 3820 2259 | info@aqua.eg

(PL) **EKOPOMP**
Trojkatna 6, 54-414 Wroclaw, Poland
P : +48 713538196
biuro@ekopomp.pl
www.ekopomp.pl

(BE) **DIMM**
Nijverheidsstraat 47/A 8970 Poperinge, Belgium
P : +33 32848 1077
dimm@dimm.be
www.dimm.be

(PL) **AQUAQUIMICA, LDA.**
Pq industrial de laundos 12a, 4570-311 laundos, Portugal
P : +351 252 600 190 F : +44 (0)1299 253704 comercial@
aquaquimica.pt www.aquaquimica.pt